

C7 PINOUT CHART

EASY CABLE ORDERING AT

► shopmtn.com/collections/cables

NUMBER	L1 PIN	L2 PIN	L3 PIN	NEUTRAL	GROUND	COMMON PIN	UP PIN	DOWN PIN
C7-30	1	2	3		4	6	5	7
C7-31	3	2	1		5	7	4	6
C7-32	1	3	7		5	4	6	2
C7-33	1	2	7		5	3	4	6
C7-34	1	2	3		5	7	4	6
C7-35	1	2	3		5	7	6	4
C7-36	2	1	3		4	6	5	7
C7-37	2	1	3		4	6	7	5
C7-38	1	2	3		5	6	4	7

P14 PINOUT

POWER & CONTROL

A = L1
B = L2
C = L3
D = UP
E = COMMON
F = DOWN
N = GRN

DUAL TWIST

16-20 PINOUT

POWER

X = L1
Y = L2
2 = L3
G = GRN

14-20 PINOUT

CONTROL

X = COMMON
Y = DOWN
W = UP



VISIT US AT

shopmtn.com | mountainproductions.com | 570 826 5566